

## DIGITECH XP200 MODULATOR PRESET LIST

<u>Program</u>	<u>Type</u>	<u>Program Name</u>	<u>Exp. Pedal Controls</u>
1	Rotary Spkr	Rotary 1 Slow / Fast	Rotor / Horn Speed
2	Rotary Spkr	Rotary 1 Brake / Fast	Rotor / Horn Speed
3	Rotary Spkr	Rotary 2 Slow / Fast	Rotor / Horn Speed
4	Rotary Spkr	Rotary 2 Brake / Fast	Rotor / Horn Speed
5	Rotary Spkr	Rotary 3 Slow / Fast	Rotor / Horn Speed
6	Rotary Spkr	Rotary 4 Brake / Fast	Rotor / Horn Speed
11	Chorus	2 Voice Shallow	Chorus Level
12	Chorus	2 Voice Medium	Chorus Level
13	Chorus	2 Voice Deep	Chorus Level
14	Chorus	4 Voice Shallow	Chorus Level
15	Chorus	4 Voice Medium	Chorus Level
16	Chorus	4 Voice Deep	Chorus Level
21	Flanger	Shallow	Flange Level
22	Flanger	Medium	Flange Level
23	Flanger	Deep	Flange Level
24	Flanger	Manual 1	Flange Sweep
25	Flanger	Manual 2	Flange Sweep
26	Flanger	Triggered	Trigger Sensitivity
31	Phaser	Shallow	Phaser Level
32	Phaser	Medium	Phaser Level
33	Phaser	Deep	Phaser Level
34	Phaser	Manual 1	Phaser Sweep
35	Phaser	Manual 2	Phaser Sweep
36	Phaser	Triggered	Trigger Sensitivity
41	Vibrato	Vibrato 1	Intensity
42	Vibrato	Vibrato 2	Intensity
43	Vibrato	Vibrato 3	Intensity
44	Vibrato	Vibrato 4	Intensity
45	Vibrato	Vibrato 5	Speed
46	Vibrato	Vibrato 6	Speed
51	Tremelo	Shallow	Tremelo Speed
52	Tremelo	Deep	Tremelo Speed
53	Auto Pan	Narrow	Panner Speed
54	Auto Pan	Wide	Panner Speed
55	Panner	Manual	Left / Right Pan
61	Volume	Volume Pedal	Volume

### To Change Modes :

- Press <Mode/Program> button.
- 1 – 61 = Factory programs.
- U1 – U6 = User programs.

### To Store User Program :

- Select Program.
- Press & hold <Mode/Program> button. The display will flash U1.
- Use the <UP/DOWN> footswitch to select user location.
- Press <Mode/Program> button to save.

### To Access and use Tuner :

- Press & hold the <BYPASS/TUNER> footswitch.
- Play a note; it will appear in the left side of the display.
- Segments rotating counter-clockwise = note is flat,  
Clockwise = note is sharp; Minus sign = in tune.